
Brass Needle Valves

0562 Needle Drain Valve, Male BSPP and Metric Thread






C	DN	1	E F H H	kg
M10x1	5	0562 05 60	8 16 37.5 40	0.031
G1/8	5	0562 05 10	8 16 36 40	0.032
G1/4	5	0562 05 13	10 19 38.5 42.5	0.040

0563 Needle Drain Valve, Male NPT Thread






C	DN	•	F H H min max	kg
NPT1/4	5	0563 05 14	14 28.5 32.5	0.021

0627 Automatic Vent Pressure Gauge Valve, Female BSPP Thread



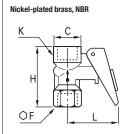


С	€		F	Н	K	L	kg
G1/4	0627 00 13	1	9	43.5	20	40	0.097

This isolating valve is used to connect a pressure gauge to a circuit. Resetting the lever isolates and vents the gauge.

A locking pin can be used to enable the gauge to be fitted permanently.

0630 Pressure Relief Valve, Male BSPP Thread



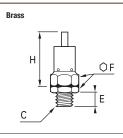

С	•	E	F	Н	kg
G1/4	0630 06 13	9	17	42.5	0.050

This valve is delivered without calibration, but can be adjusted by inserting metal washers into the hexagon (F).